



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200

D205-634-041
Job Sheet 171285



Part No: D205-634-041

Job Qty: 1 ea

Part Name: Replacement Skidtube with Standard Wearplates Fits LH or RH



Part Weight: 0 lbs

Status: Scheduled

Priority: Medium

Job Created: 1/30/18

Job Tracking No:

Due Date: 2/19/18

Created By: Michelle Gagnon-Donovan

Type: Stock

Description:

Note: DWG REV H SHEETS 1,2,3,8 IPP Rev:N 02.08.28 FP was QC5 in Step 27; Added QC5 to Step 30 KJ IPP Rev P 10.02.19 per PAR09-043 EC verified by:DD IPP Rev. O 06.02.28 Added paperwork EC IPP Rev:P 07-07-09 SS Wearplates & Gaskets JLM IPP Rev:Q 10.12.01 as per chg003 DD verf:EC IPP REV:R 12.01.23 AS PER ECN11-684 VERF:EC IPP REV:S 17.12.08 REMOVE GASKET AS PER INTUITIVE INFO DD VERF:JFS

Ship Via:

Bill of Materials

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup	Run	Workcenter / Supplier	Lead Time	
90	Start up Operation	1 Ea		2/16/18	0.00	0.00	Start Up Skidtubes		M66
110	CNC Bend Skidtubes	1 pcs		2/16/18	0.00	0.65	CNC Bend Skidtube		M66 JSL
120	Skidtubes	1 pcs		2/17/18	0.00	2.89	Skidtubes-2		M66
130	QC	1 pcs		2/17/18	0.00	0.00	QC5		BE
140	Skidtubes	1 pcs		2/17/18	0.00	2.89	Skidtubes-2		BEAS
150	QC	1 pcs		2/17/18	0.00	0.00	QC10		38 DAS
160	QC	1 pcs		2/17/18	0.00	0.00	QC5		9-89 38
170	HandFinish	1 pcs		2/17/18	0.00	1.31	HandFinish2		SA 18-3-14
180	Powdercoat	1 pcs		2/17/18	0.00	0.34	Powdercoat1		BR 18-3-16
190	QC	1 pcs		2/17/18	0.00	0.00	QC3		M 18-3-14
200	HandFinish	1 pcs		2/19/18	0.00	1.31	HandFinish4		all DAS
210	QC	1 pcs		2/19/18	0.00	0.00	QC5		38
215	DC	1 pcs		2/19/18	0.00	0.00	DC		9-89
220	Packaging	1 pcs		2/19/18	0.00	0.00	Packaging3-1		SmB
230	QC21-FG	1 Ea		2/19/18	0.00	0.00	QC21		9-89 4nd 18/03/11 F8073

Part Op 110 - 1-Bend as per program D2580.C on CNC Bender and Folio 16 2-Cut tubes as per Dwg 20480 3- scribe batch# in Descriptions: aft end of tube

120 - 1- Deburr ends and remove bending marks 2- Prepare tube for welding as per QSI 004

140 - 1-Weld step D2576 as per Dwg. D2580 and QSI 004 2-Grind welds on step as per Dwg D2580 3- Insert D4202-1 spacer, swage as per QSI002 and trim/ grind flush per QSI002 and dwg. Hold x-bolt with DT9701 Use tube expander 1/2 x17G to start expansion and finish with 1/2 x 18G to achieve dwg dimension. 4-Drill holes for wearplates using DT 8217 & DT8937, 7.40" from most fwd saddle holes (ref only) Open holes to 19/64", adjust stopper not to hit web.Deburr 6-Drill pilot holes for aft cap using DT 8215Open holes to 0.208". Deburr 7-Drill pilot holes for Tow ring using DT8091, open to .640"and Deburr

170 - Re-alodine tube as per QSI 005 section 4.1.2.1 do not acid etch and leave fwd cap out of solution.

180 - START TIME: 9:15 OVEN TEMPERATURE: 200° FINISH TIME: 9:45

200 - 1-Install inserts & wearplates as per Dwg. D2580. Use a drop of Sikaflex on insert holes before installing wearplates A/R Sikaflex-291 M138782 Sikaflex expire date: 12/04 2-Coat D2594-3 O' rings with Petroleum Jelly and install on D2594-1 plugs as per Dwg D2580 3-Inspect for foreign object per QSI 024 4-Install 2855 Aft Cap as per Dwg D2580 and seal Fwd Step & Aft Cap with Sikaflex. Clean excess adhesive A/R Sikaflex-291 M138782 Sikaflex expire date: 12/04 5-Wing Walk as per Dwg D2580 and QSI 005 4.4 Batch: 11138761

210 - Inspect Aft Cap, Fwd Step and Wing Walk of work to Current Step Inspect for Foreign objects per QSI 024

215 - Photocopy D205-634 bluefile & type labels per PPP D205-634-041 CHG006

220 - Identify and pack for shipping as per PPPD205-634-041 Location: _____ PPP Rev: _____

Job BOM				
Part / Item	Component Name	Quantity	Operation	Container
D2580-1	205 Bent Tube	1 Ea (1 ea)	90-Start up Operation	S047903
D2576-3	Step (Machining Detail)	1 Ea (1 ea)	140-Skidtubes	B136023
D4202-1	Spacer	20 Ea (20 ea)	140-Skidtubes	S039216
ALS7-1032-130	Rivnut	50 Ea (50 ea)	200-HandFinish	S037279
AN3-5A	Bolt	2 Ea (2 ea)	200-HandFinish	S013737-1
AN3C4A	Bolt S019394 x 18	50 Ea (50 ea)	200-HandFinish	(32i) F1138040-3
D2594-1	Plug	16 Ea (16 ea)	200-HandFinish	S045169
D2594-3	O-Ring S035836	16 Ea (16 ea)	200-HandFinish	S049975
D2855	Cap F147805	1 Ea (1 ea)	200-HandFinish	S027995
D3564-11	Wearplate Aft	1 Ea (1 ea)	200-HandFinish	S041095
D3564-13	Wearpad Fwd	1 Ea (1 ea)	200-HandFinish	S023422
D3564-5	Wearplate Center	1 Ea (1 ea)	200-HandFinish	S045073
D3564-9	Wearplate Fwd	1 Ea (1 ea)	200-HandFinish	S044236
NAS1149C0332R	Washer	50 Ea (50 ea)	200-HandFinish	S020600
NAS1149D0332J	Washer	2 Ea (2 ea)	200-HandFinish	
Job Allocations				
Operation	Component Part	Required	Inventory	Allocated
90-Start up Operation	D2580-1	1	5	0
140-Skidtubes	D2576-3	1	45	0
	D4202-1	20	959	0
200-HandFinish	ALS7-1032-130	50	0	0
	AN3-5A	2	263	0
	AN3C4A	50	1,944	0
	D2594-1	16	428	0
	D2594-3	16	581	0
	D2855	1	74	0
	D3564-11	1	22	0
	D3564-13	1	16	0
	D3564-5	1	32	0
	D3564-9	1	25	0
	NAS1149C0332R	50	2,621	0
	NAS1149D0332J	2	4,012	0
Part Specifications				
Specifications could not be found.				

non.Michelle

Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL: 1 813 632-8200
Email: sales@dartaero.com
www.dartaerospace.com

Date: 03/12/18



Container No: S050107



Part: D205-634-041

Job No: 171285

Serial No/Batch: S050107

Revision: H

Inspector:

ITEM	QTY -041	QTY -045	QTY -047	QTY -049	PART NUMBER	DESCRIPTION
1	X				D2580-041	SKIDTUBE ASSEMBLY
2		X			D2580-045	SKIDTUBE ASSEMBLY
3			X		D2580-047	SKIDTUBE ASSEMBLY
4				X	D2580-049	SKIDTUBE ASSEMBLY
20	1	1	1	1	D2500-1-190	EXTRUSION
21			16	16	D2570	BUSHING
22	1	1	1	1	D2576-3	STEP
23		4			D2579	SPACER
24	16	16	8	8	D2584-1	PLUG
25	16	16	8	8	D2584-3	O-RING
26	1	1	1	1	D2596	205 WEB
27	1	1	1	1	D2555	AFT CAP
28	1	1			D3584-5	WEARSHOE
29	1	1			D3584-9	WEARSHOE
30	1	1			D3584-11	WEARSHOE
31	1	1			D3584-13	WEARSHOE
32	20	20	24	24	D4202-1	SPACER
33			1		D4406-041	WEARPLATE ASSEMBLY
34			1		D4408-043	WEARPLATE ASSEMBLY
35				1	D5061-1	FWD WEARPLATE
36				1	D5061-3	AFT WEARPLATE
50	50	50			ALST-1032-130 or AKS7-1032-130 or AKS4-1032-130 or AELS-1032-130	INSERT
51	50	50			AN3C4A	BOLT
52	2	2	2	2	AN3-5A	BOLT
53			8	8	AN4-45A	BOLT
54	50	50			NAS1149C0332R	WASHER (AN880C10L)
55	2	2	2	2	NAS1149D0332J	WASHER (AN880J010L)
56			8	8	MS21042-4	NUT (OR MS21042L4)

GENERAL NOTES:


- 1) MATERIAL: N/A
- 2) FINISH: CHEMICAL CONVERSION PER DART QSI 005 4.1 PRIOR TO INSERTING D2596 WEB
POWDER COAT (-041/-047/-049) GLOSS WHITE (REF 4.3.5.1) PER DART QSI 005 4.3
POWDER COAT (-045) GREEN SANDTEX (REF 4.3.5.8) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT AS INDICATED PER DART QSI 005 4.4.
- 3) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED.
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX.
- 6) IDENTIFICATION: NONE
- 7) WEIGHT: D2580-041 = 33.7 lbs
D2580-045 = 33.7 lbs
D2580-047 = 45.1 lbs
D2580-049 = 32.0 lbs
- 8) WELDING PER DART QSI 004.
- 9) INSERT D2596 WEB TO LOCATION SHOWN OFF AFT END OF SKIDTUBE AND BOND WEB INTO OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241 ADHESIVE PER DART QSI 018 BEFORE BENDING. ENSURE HOLES LINE-UP.
- 10) BEND AS A SMOOTH RADIUS STARTING WITH A MAXIMUM CENTERLINE RADIUS OF 60 AND ENDING WITH A MINIMUM RADIUS OF 30. A MAXIMUM REDUCTION OF 0.200 IN DIAMETER IS ALLOWABLE IN THE BENT PORTION OF THE TUBE.
- 11) USE DART DRILL TEMPLATE DT8217 & DT8937 ONLY FOR D2580-041/-045 TO LOCATE AND DRILL Ø0.287 HOLES FOR WEARSHOE INSERTS. INSTALL ALST-1032-130 PER SECTIONS B-B AND F-F (50 PLACES) AFTER FINISH. INSTALL AN3C4A BOLTS AND NAS1149C0332R WASHERS WITH SIKAFLEX-241/251.
- 12) INSERT D2584-1 PLUG C/W D2584-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE) AFTER FINISH (16 PLACES FOR D2580-041/-045 AND 8 PLACES FOR D2580-047/-049)
- 13) IT IS ACCEPTABLE TO GRIND A RELIEF IN THE D2555 AFT CAP TO PREVENT INTERFERENCE WITH THE SPACER AT THIS LOCATION

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 171285


FEB 08 2018

RELEASED
2017 JUL 05
ECN17-519


H	SHEET: PL DELETE D3586-1/-5/-13 GASKETS, WEIGHTS UPDATED ACCORDINGLY. SHEETS 2 & 4 PICTORIAL UPDATE FOR REMOVAL OF GASKETS	SAD	17.06.09
G	ADDED -045, -047 WEIGHT UPDATED PER DSI 9596	AJS	14.04.09
F	INCORPORATE DEO D2580-E-1 PER PAR12-218	DC	13.06.20
E	ADD D2580-047 (ZN C4-7) AND D2580-7 (ZN B3-8); INCLUDED DEO D2580-D-1; REFORMATTED DRAWING TO CURRENT STANDARDS; DT8217 & DT8937 WAS T02577-208 (ZN C4-1)	RF	11.06.21
D	CHANGE TO 88 WEARPLATES AND GASKETS, INCLUDE DEO 9124/ 9183	PH	07.04.05
C	REDRAWN, INCLUDED DEO 9094/ 9097	CP	06.06.28
B	AS MANUFACTURED	DS	06.12.02
A	NEW ISSUE	DS	06.06.16
REV.	DESCRIPTION	BY	DATE
DESIGN	DS		
DRAWN	SAD		
CHECKED			
MFG. APPR.			
APPROVED			
DE APPR.			
DATE	17.06.09		
DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA DRAWING NO. D2580 SHEET 1 OF 9 TITLE 205 SKIDTUBE ASSEMBLY SCALE NTS COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSES OR COPIED OR REPRODUCED IN ANY MANNER WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

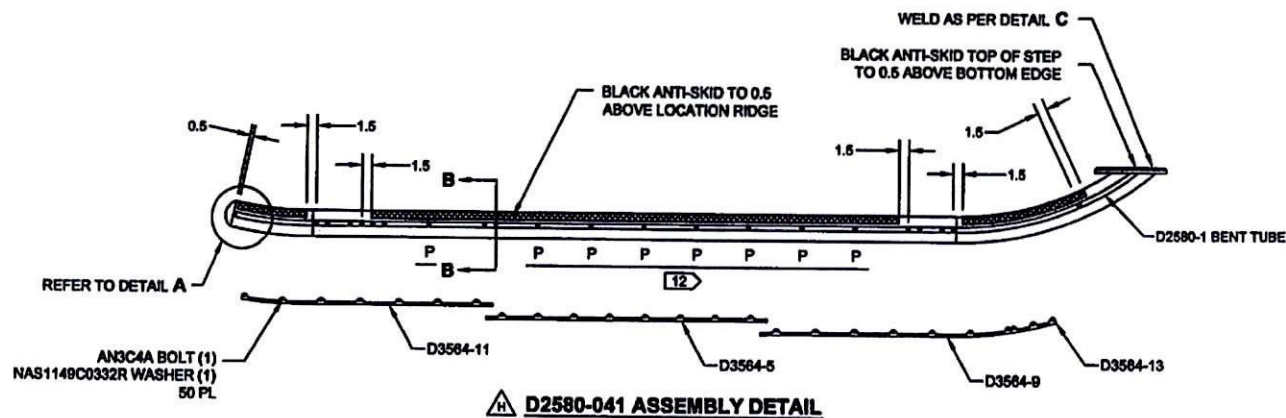

DETAIL A
SCALE 5X

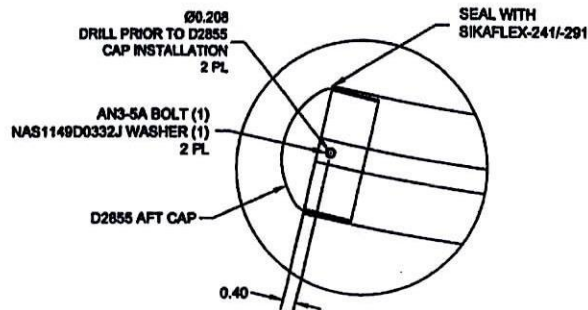


SECTION B-B
SCALE 5X

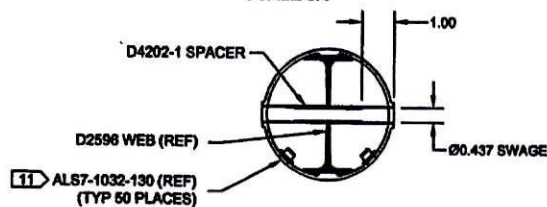


AFTER DRILLING AND BENDING ASSEMBLY
PERFORM THE FOLLOWING FOR Ø0.508 HOLES ONLY:
1. INSERT D4202-1 SPACER (20 PLACES)
2. SWAGE TO Ø0.437 X 1.00 DEEP PER QSI 002
3. TRIM / GRIND FLUSH PER QSI 002

DETAIL C
SCALE 5X

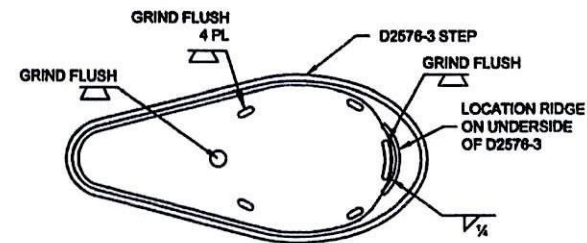

RELEASED
2017 JUL 05

DESIGN	DS	DART AEROSPACE LTD	
DRAWN	SAD	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. H
MFG. APPR.	<i>[Signature]</i>	D2580	SHEET 2 OF 8
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	205 SKIDTUBE ASSEMBLY	NTS
DATE	17.06.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD	
THIS DOCUMENT IS UNCLASSIFIED AND IS AVAILABLE ON THE INTERNET WITHOUT CHARGE. IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR REPRODUCED IN ANY MANNER WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

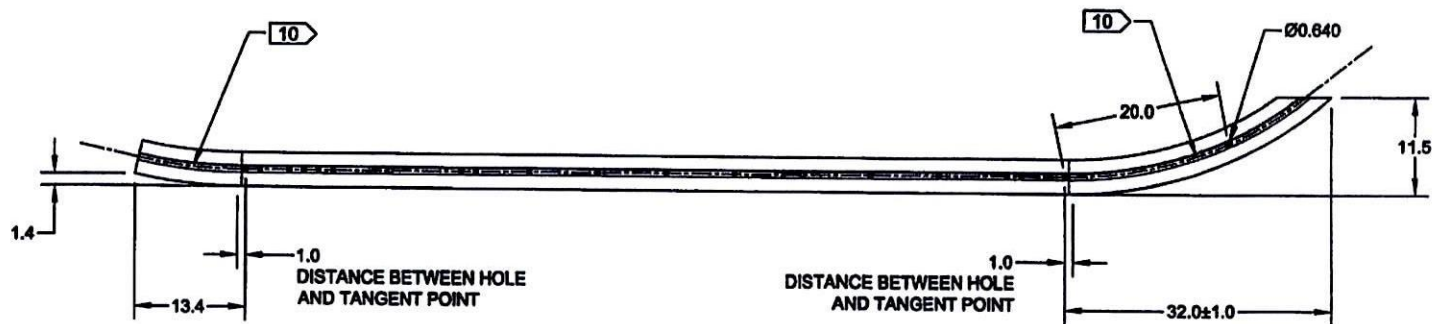


D2580-1 BENT TUBE
(MAKE FROM D2580-101 TUBE)

RELEASED

2017 JUL 05 4P

DESIGN	DS	DART AEROSPACE LTD	
DRAWN	SAD	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. H
MFG. APPR.	<i>[Signature]</i>	D2580	SHEET 3 OF 9
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	205 SKIDTUBE ASSEMBLY	NTS
DATE	17.06.09	COPYRIGHT © 1998 BY DART AEROSPACE LTD	
THIS DRAWING IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR REPRODUCED IN ANY MANNER WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

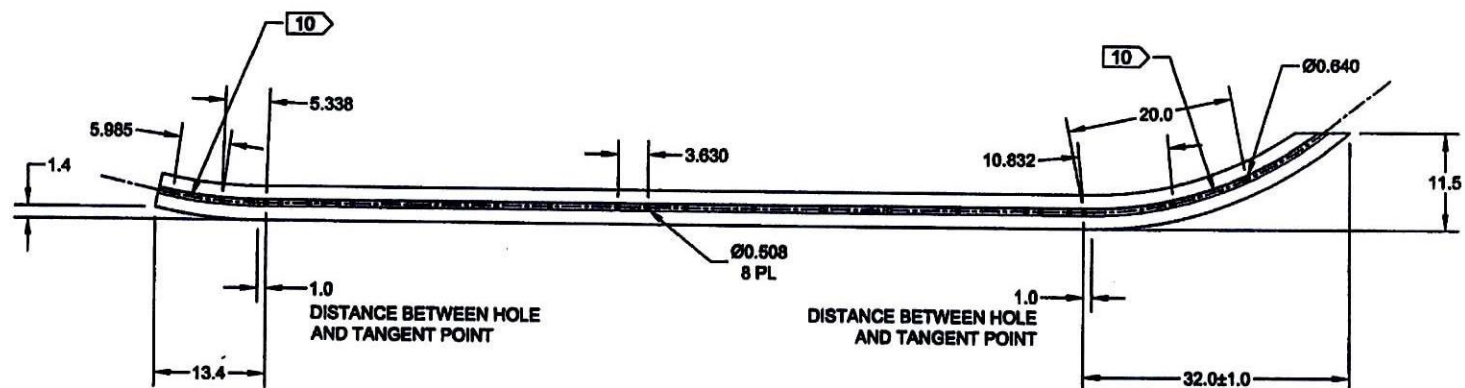

D2580-7 BENT TUBE
(MAKE FROM D2580-101 TUBE)

RELEASED

2017 JUL 05 *dp*

DESIGN	DS	DART AEROSPACE LTD	
DRAWN	SAD	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. H
MPG. APPR.	<i>[Signature]</i>	D2580	SHEET 8 OF 9
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	205 SKIDTUBE ASSEMBLY	NTS
DATE	17.06.09	COPYRIGHT © 1998 BY DART AEROSPACE LTD THIS DOCUMENT IS UNCLASSIFIED AND IS RELEASED ON THE EXPIRATION CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR REPRODUCED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	